Speaker repair

Speaker parts

B01R / B01HR/B01CR/B02G (Step 1~5)

B02R / B03R (Step 2~4)



Scan QR code to watch video



Speaker x1 Screw x 3 Plastic slice x1 Stainless hook x1


1.Remove the velcro tape.



2.Take out the screws.




4.Put in and screw the new speaker.

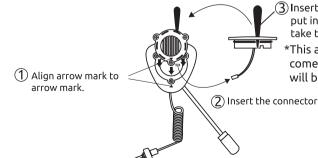

- 3 Insert the plastic slice over the oring, put in the new speaker and take the slice out.
- *This action could let the air come out ,otherwise the sound will be low.

3.Use stainless hook to take out speaker.

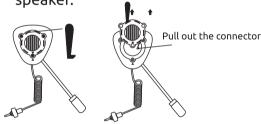

5.Stick on velcro tape.

