 


STEP 1

1. Disable your PC's bluetooth.

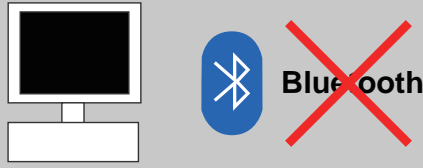

2. Download UPDATE WIZARD and install on your PC.


FILE NAME: BbTALKIN DfuWizardSetup v.1.4




All Firmware of BbTALKIN series is compatible with Win 7, 8, 10

STEP 2

1. Open the UPDATE WIZARD and connect PC and BbTALKIN device with micro USB cable.

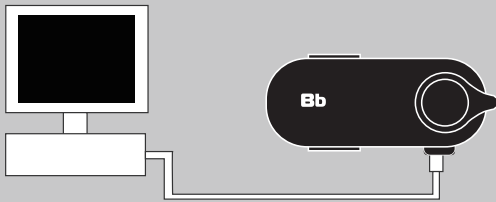

2. Press and hold **UP** and **DOWN** button for 3sec. until LED blue and red flashes alternately.

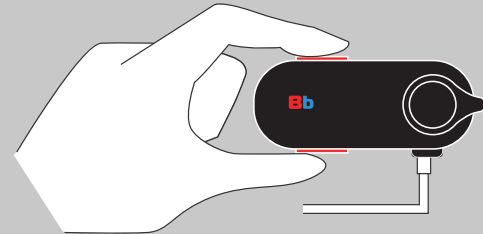

STEP 3

1. Download firmware and install on your PC.



2. Download FW(firmware), unzip file and save on desktop. Open the Dfu Wizard and follow the steps to update the firmware.

!! WARNING !!

DO NOT INSTALL OTHER FIRMWARE TO BB MOTOE. WE ARE NOT RESPONSIBLE FOR THE DAMAGE OF THIS ISSUE.

STEP 4

1. Start to update. Do not plug out the USB cable while updating.



2. It may take few minutes to update.

LOADING...

Press FINISH when update is completed.